


# BLADE SPEAKER

## User Manual

1. Power/Mode(Bluetooth/FM)
2. Lanyard whole
3. LED Indicator
4. Microphone
5. Bone Conduction Speaker
6. Type C port
7. Function Key

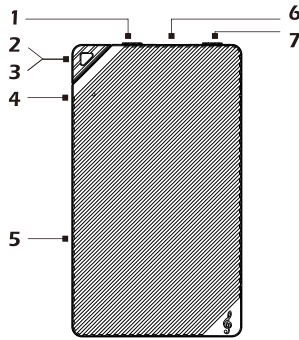

## Operation instruction:

### Single Speaker Operation:

1. Long-press the power key until you hear the voice indicate "Power on."
2. Turn on your phone's Bluetooth, search for " **Blade SPEAKER**" and pair.
3. Once connected, place Blade SPEAKER on surface of any hollow object to play.

### Double Speaker Stereo Operation (TWS):

Turn on both speakers in same time, 3-5 seconds, the speakers can paired each other automatically.

### FM Function:

1. Short-press the Power key to switch from Bluetooth mode to FM mode.
  2. Long-press the Function key to search FM channels automatically.
  3. After searching finished, short-press the Function key to switch radio station.
  4. FM Volume control: single click-go down, double click-go up, triple click-switch to next stored station.
- (\* Suggest to use FM function outdoors, plug in USB cable as well.)

 
### Charging:

The charging cable can be used with regular USB 5V charger, Car USB charger ..., but it is not compatible with fast charger, especially with 9V 12V and other chargers whose output voltage is higher than 5Voltage.


### LED indicator:

When charging, the red LED will be lighted. Once charged, the red LED will be off.  
When Bluetooth mode turned on, and the LED blue light will blink. Once paired/connected, the blue light will be always on.

### Tips



Before starting, peel off the protect film of the stick pad which on the bottom of speaker, then place the speaker onto the surface of any hollow subjects.

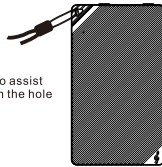

Using nail/pin to assist lanyard through the hole

\* Any queries, pls contact us: hello@bocoice.com

# BLADE SPEAKER

## Note:

1. After several trial, sticky pad will be not sticky enough, you can clean the dust with wet cloth, then it can back to well sticky. Double side tape will be useful also.
2. If you play music at maximum volume, the speaker itself will get hot, which is normal. When the volume is lowered little, the speaker will return to normal temperature.

## FCC Warning :

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



R214-111037



5.0



RoHS

bocoice™

www.bocoice.com